
Dimension Guide

Top freezer refrigerator

Model:

н

ETB4600B-G

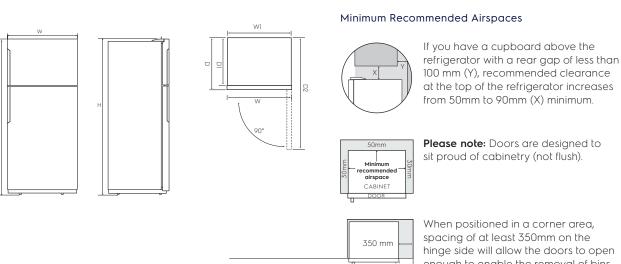

Front face of bench aligned to front corner edge of cabinet.



enough to enable the removal of bins and shelves.

Top Mount	Door width	Total depth	Maximum	Cabinet	Cabinet	Depth door	Cabinet
Models	(W)	(D)	height (H)	width (W1)	depth (D1)	open (D2)	height (H1)
ETB4600B-G	699	723	1725	693	641	1360	1705

Important! Please ensure that the access to your kitchen (including doorways, corridors, island benches, etc) allows sufficient clearance to move your fridge into position. Please note! Dimensions to be used as a guide only. All customers MUST refer to the user manual supplied with the product for detailed installation instructions. © 2021 Electrolux S.E.A PTE. LTD. E_DIM_ETB4600B-G_Aug20

